

INSTALLATION INSTRUCTION AEROKLAS UNIVERAL ROOF RACK SYSTEM

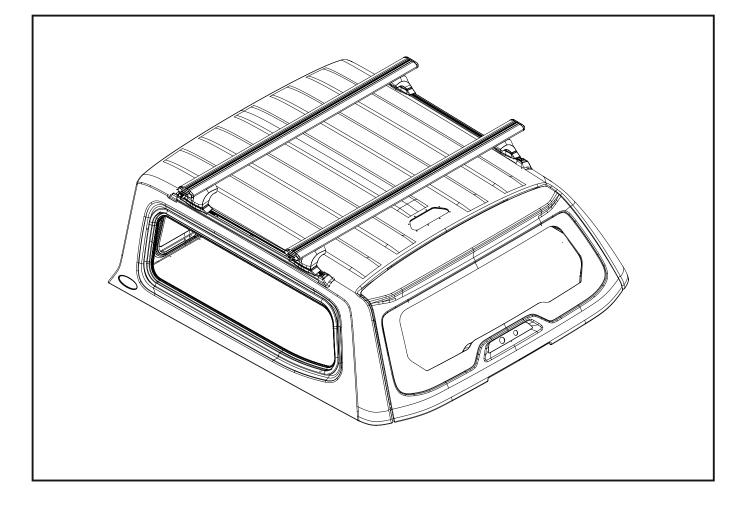


FIEROKLAS

Rev.01	AEROKLAS UNIVERAL ROOF RACK SYSTEM	20337000004	1/9
--------	------------------------------------	-------------	-----

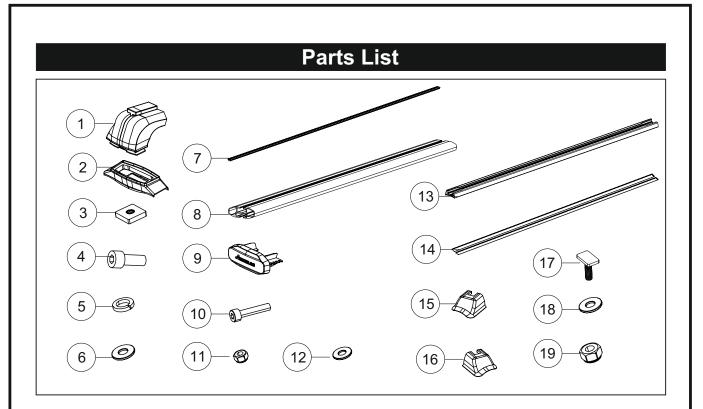

Items	Component Name	Part No.	Q'ty	Tools	
	AEROKLAS UNIVERSAL ROOF RACK LEG(SET)			1. Tape Measure	
1.	ROOF RACK LEG	10200000940	4	2.Ø4 Drill Bit	
2.	ROOF RACK LEG COVER	102060000942	4	3.Ø8 Drill Bit	
3.	PLATE-SLOT M8(20x20x4.5)	10206000060	4	4. Drill 5. Marking Tape 6. Marker	
4.	SOCKET BOLT M8x20	10206000060	4		
5.	SPRING WASHER M8	10200000941	4		
6.	PLAIN WASHER M8(OD18x1)	102040000072	4		
	AEROKLAS UNIVERSAL CROSS BAR(SET)			7. Silicone	
7.	RUBBER STRIP (L1375)	10200000944	2	8. Soldering Iron	
8.	CROSS BAR (L1375)	102060000943	2	9. Hex Wrench	
9.	CROSS BAR ENDCAP	102060000945	4	10. Wrench	
10.	SOCKET BOLT M4x20	102060000061	4		
11.	NYLON NUT M4	10200000946	4		
12.	PLAIN WASHER M4 (OD10x0.8)	102040000073	4		
	AEROKLAS UNIVERSAL ROOF RAIL(SET)				
13.	TRACK(L885)	10200000947	2		
14.	FOAM CR+ADHESIVE TAPE 2 SIDE (10x885x1.3)	102060000065	4		
15.	TRACK ENDCAP LR/RF	102060000948	2		
16.	TRACK ENDCAP LF/RR	102060000949	2		
17.	T-BOLT M6x20	10200000062	14		
18.	PLAIN WASHER M6 (OD24x2)	102040000074	14		
19.	NYLON NUT M6	102040000950	14		

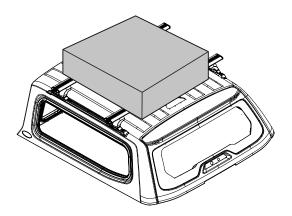

Max load on top 100 kg

Please refer to your vehicle manufacturers handbook for maximum carrying capacity. Always use the lower of the two figures.

Load must be evenly distributed over the entire Pioneer. Weight of roof rack accessories is to be included in cargo allowance.

Torque settings:

Unless stated otherwise in these instructions, all fasteners should be set to the following torque settings - M6: 4-5Nm (3-4lbs/ft), M8: 8-10Nm (6-7.5lbs/ft) and M10: 16-18Nm (12-13lbs/ft).

Warning:

- Check Part No. and/ or Kit is correct for use with your vehicle
- Do not attempt to fit the rack system to your vehicle unless you fully understand these fitting instructions. Please direct any questions regarding fitting to the dealer from where the roof racks were purchased.
- Use only non-stretch fastening ropes or straps.
- The handling characteristics of the vehicle changes when you transport a load on the roof. For safety reasons we recommend you exercise extreme care when transporting wind-resistant loads. Special consideration must be taken into account when cornering and braking.
- Although the system is tested and approved to AS1235-2000, off-road conditions can be much more rigorous. Extreme care must be taken in off road conditions.
- Roof racks must be removed when vehicle is put through an automatic car wash.

Recommendations:

It is essential that all bolt connections be checked after driving a short distance when you first install your roof racks.

Bolt connections should be checked again at regular intervals (once a week is enough, depending on road conditions, usage, loads and distances travelled).

You should also check the roof racks each time they are re-fitted. Always make sure to fasten your load securely. Please also ensure that all loads are evenly distributed and that the centre of gravity is kept as low as possible and must be entirely contained within the extents of the roof racks.

Note for Dealers and Fitters:

It is your responsibility to ensure these fitting instructions are given to the end user or client

AEROKLAS UNIVERAL ROOF RACK SYSTEM

